MOD. **CHILY**

It is important that you read these instructions before using you new oil filled radiator and we strongly reccomend to keep them in a safe place for future reference.

Version 05/04

GENERAL INFORMATION

These series of oil filled radiators has been designed with advanced tecnology, according to the requirement for heating home appliances in the international market.

Our radiators have a characteristic graceful figure, a beautiful colour and are easy to use.

Our radiators are ideal heating appliances for you when it's cold.

IMPORTANT SAFEGUARDS

- Read these instructions carefully and look at the pictures before using the oil filled radiator.
- Before connecting the heater, check that the voltage indicated on the rating label corresponds to the mains voltage in you home or your office.
- Avoid the use of an extension cord because it may lead to overheating.
- Only touch the heater with dry hands.
- Do not position the heater where it can be touched by children, especially if they are very young.
- Do not let children play with the appliance.
- Do not position the heater under a power socket.
- Do not use this heater outdoors.
- This radiator cannot be used in bathrooms, in laundry areas or similar indoor locations. Never locate the heater where it may fall into the bathtub or other water container.
- Never immerse the appliance, cord and plug in water.
- Never use the appliance on a damp floor.
- Never use the appliance near or on hot surfaces.
- When you use the radiator, do not place in the immediate surroundings of a shower or swimming pool.
- Position the heater in such a manner that the air flow towards the radiator and away from it is not obstructed.
- The heater must not be covered.
- Allow a safe area around the heater away from forniture or other objects; at least 50 cm from the top and sides and 50 cm at the front.
- Do not use this heater when it is lying on its side.
- If the heater is tipped over, unplug it and allow it to cool bifore standing it back up.
- Do not use the heaters in rooms with esplosive gas (ex. petrol) or while using inflammable glue or solvent (ex. when gluing or varnishing parquet floors, PVC etc).
- Extra caution is necessary when the heater is used near children or when it is left unattended.
- Do not insert any objects into the heater.
- Keep the mains cord at a safe distance from the main body of the appliance.
- Never let the cord touch any hot surfaces.

- Prevent overheating of the heater by keeping the air inlet and outlet unblock. Do not hang anything in front of or above the heater.
- If overheating should occur, the built overheating safety device will switch off the heater.
- Do not use aerosol, inflammable substances or materials sensitive to heat in the flow of hot air.
- Should the heater stop working, fist check if the circuit breaker at the distribution board is operating, before contacting the manufacturer or the service agent.
- Never use the appliance with a damaged cord or plug.
- Never insert the plug into a damaged socket.
- If the supply cord or plug is damaged, it must be replaced by the manufacturer or its service.
- This heater is filled with a precise quantity of special oil. Repairs that require opening of the radiator body (like oil leakage) are only to be made by the manufacturer or its service agent, who should be contacted if there is an oil leakage
- The heater contains no user serviceable parts.
- Do not use the heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- Always unplug the appliance before assembling/disassembling.
- Always unplug the appliance before cleaning.
- Always unplug the appliance when not in use.
- Never use caustic or abrasive cleaning.
- When scrapping the heater, follow the regulations concernine the disposal of the oil.

PRODUCT DESCRIPTION

1. Handle
2. Indicator light
3. Power selector
4. Thermostat control
5. Cord storage
6. Metal axle and wheels

INSTALLATION

Do not operate the heater without the wheels assemblies attached to the bottom of the unit. To do so may result in fire hazard.

1. Loose nut and washer from casters.
2. Attached casters with two metal axles with washer and nut.
3. Turn the heater upside down for easy assembly.
4. Place the metal axle and wheels assembly between the last two fins at each end of the heater.
5. Attach the axle and wheel assemblies onto the heater with the U bolts and wiring nuts supplied.
6. Remove the wiring nut from the U bolts and insert the U bolt through the holes in the axle and wheel assembly as shown, reattach the wing and tighten firmly.
7. Turn the heater to its upright position for operation. The heater is upright when the handle and controls are at the top of the unit.

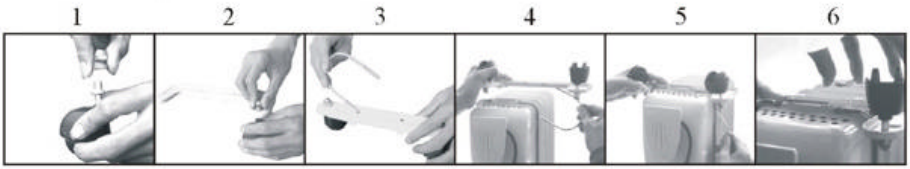

CONTROL PANEL

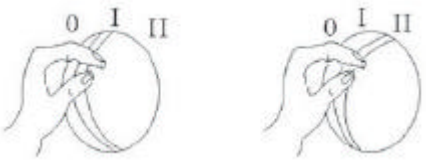

Caution: surface is hot during operation

1. Select an indoor location for the heater away from electrical cords, drapes and other furnshings. Do not place the heater directly beneath and electrical outlet or against paper board or low density fiberboard.
2. Turn power selector to “0” and the themostat to LOW before plugging in the radiator.
3. Plug the heater into the main supply.
4. Switch the heater to one of the power setttings I or two.
5. The operating temperature is selected by adjustment of the thermostat. The hottest setting will be when the thermostat is to “HIGH”, the coolest when it is set to “LOW”.
6. To determine the correct working temperature for your conditions, turn the themostat to the “HIGH” position. The power light will be activated and the radiator will start to get warm. When the unit reaches the correct temperature, slowly turn the thermostat anticlockwise until the power light goes off. The temperature now will be kept costant.
7. The first time the heater is used there may be an odour that will disappear after 30 minutes of operation. The odour is due to a lubricant used durino the manufacturing of the heater.

SAFETY OVERHEAT SHUT OFF

Your heater is fitted with a safety device to switch off the heater in the event of overheating. If an overheat temperature is reached, the heater will automatically shut off and the power indicator light will go off. Should the heater stop working, turn the heater off and unplug the heater. Wait at least 5 to 10 minutes for the protection system to reset before attempting to restart the heater.
If the heater fails to operate or the safety device switches the heater off again, return the heater to your nearest service center for examination or repair.

CARE AND MATEINANCE

The heater requires regular cleaning to censure trouble free operation.

1. Do not stand the heater and treat it carefully at all times.
2. Always turn off and unplug the heater from the mains supply before cleaning.
3. Use a damp cloth to wipe the exterior of the heater to remove dust and dirt.
4. Ensure the heater is dry before plugging back into the mains supply.
5. Do not allow water to run into the interior of the heater as this could create a fire or electric shock hazard.

argoclima S.p.A.
headquarters

via Varese,90
21013 Gallarate(VA)Italy
Tel: +39 0331 755111
Fax:+39 0331 776240
www.argoclima.com

argoclima Iberica S.L.
C/Chile n°10 Ed.Madrid 92.Of.011.
28290 Las Matas de las RozasMadrid
Tel:+34 916 304661
Fax:+34 916 303613
N° S.A.T.: 902 195054

argoclima Hellas A.E.

25 Vouliagmenis
165 61 Glifada-GREECE
Tel.: +30 2 1096.37.428-429
Fax: +30 2 1096.37.432